


# NOVA LUCE


9030707 9030708

1

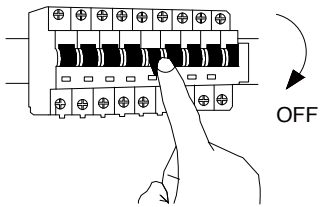


Turn off the general switch

2

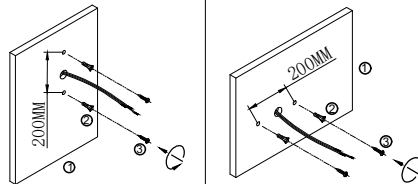


Drill holes & apply plastic anchors  
With screws

3

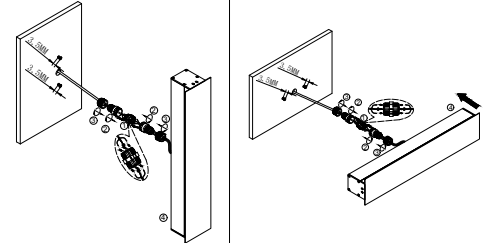


Connect the wires

4

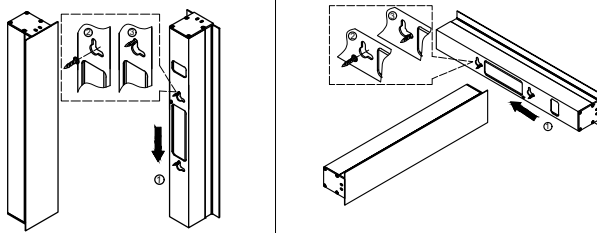

Apply the element in place

5

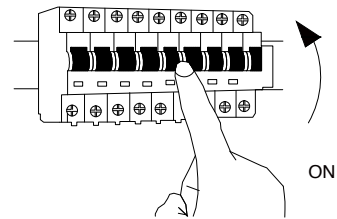

Turn on the general switch

